


How to Print an X or Z Report

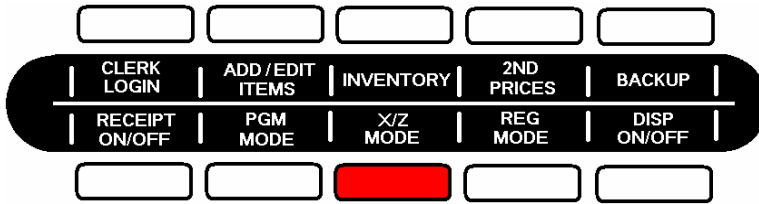

1. Press the X/Z Mode button on the register.



2. To print an X report, highlight number 1, Daily X report. Press YES three times.
3. To print a Z report, highlight number 4, Daily Z report. Press YES three times.




4. To print an X or Z report of a different type, select Daily X or Daily Z and press YES once. And then highlight Others which is number 5 as seen on the diagram on the left.



5. Once you see the screen on the left you may select any type of report you wish to review. Just select one and press YES.
6. To view more report options, press the PAGE DOWN button on the register.



7. For example, to print a Monthly Sales report select Monthly Sales which is number 11 and press YES.

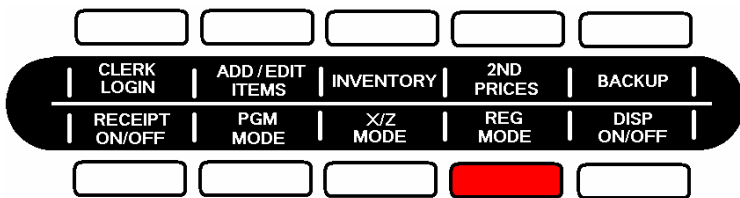

8. To use the register normally, press ESC/SKIP button on the register and then press the REG MODE button.