 
 


Set the date.


1. Turn on the register.

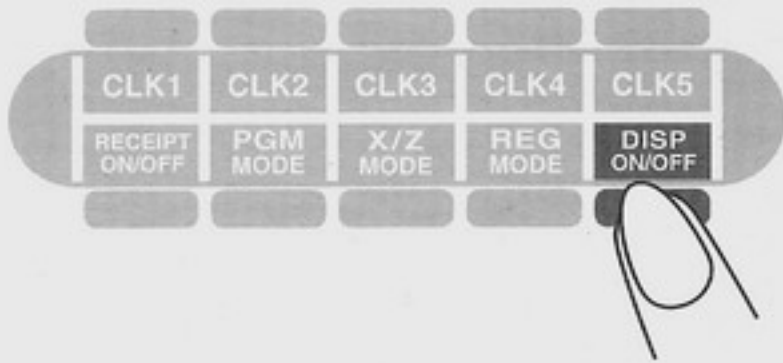

2. Sign on a clerk.

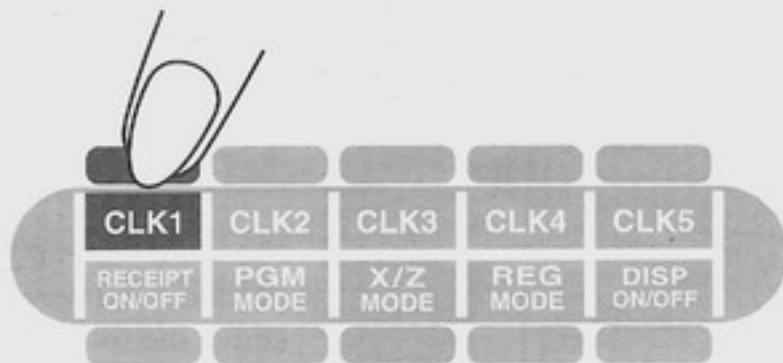

3. Press the <PGM MODE> key.

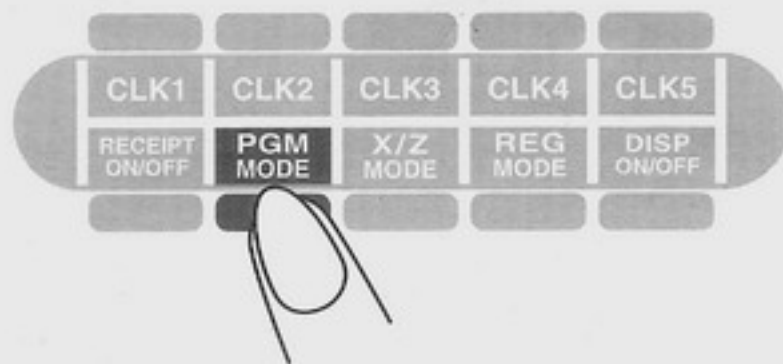

4. Enter the current date in six digits (year, month, day order) and press the key.

