 
 
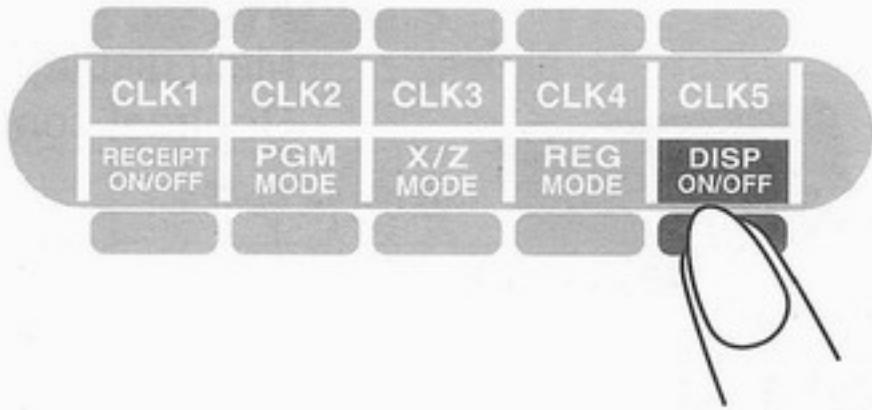 


Set the time.

 
 
1. Turn on the register.

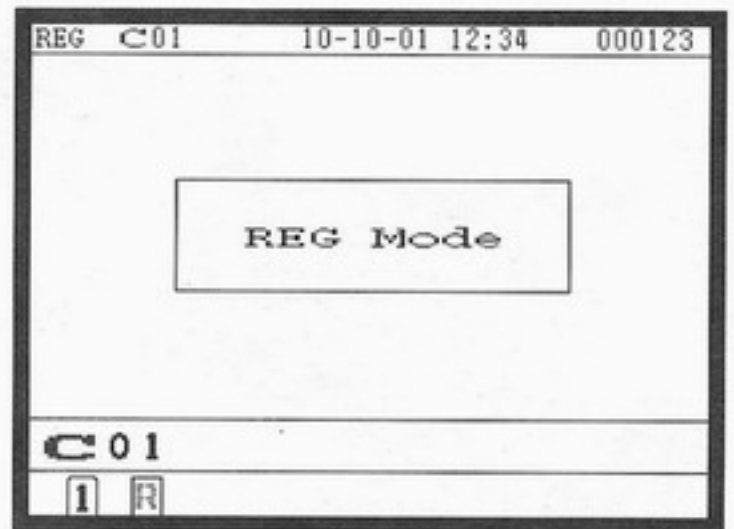

2. Sign on a clerk.

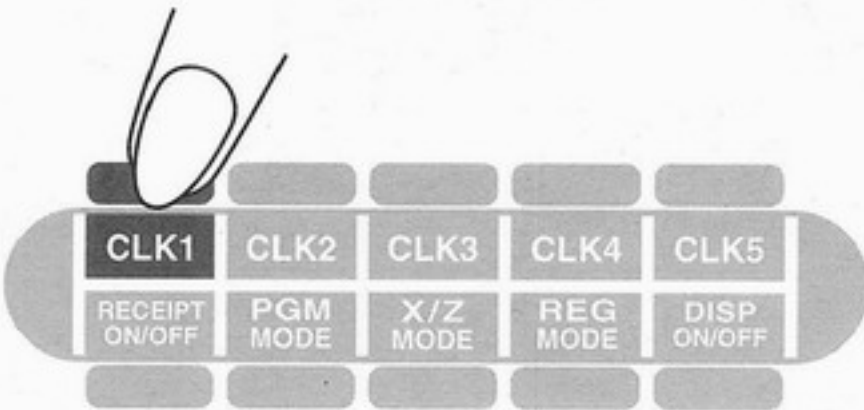

3. Press the <PGM MODE> key.

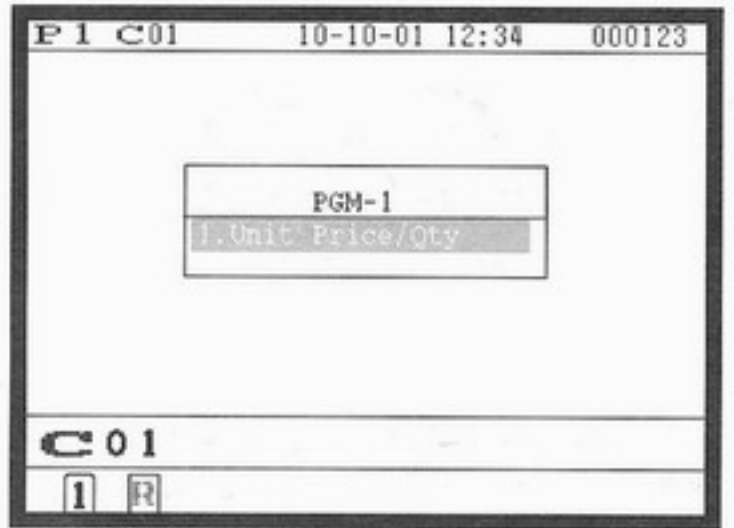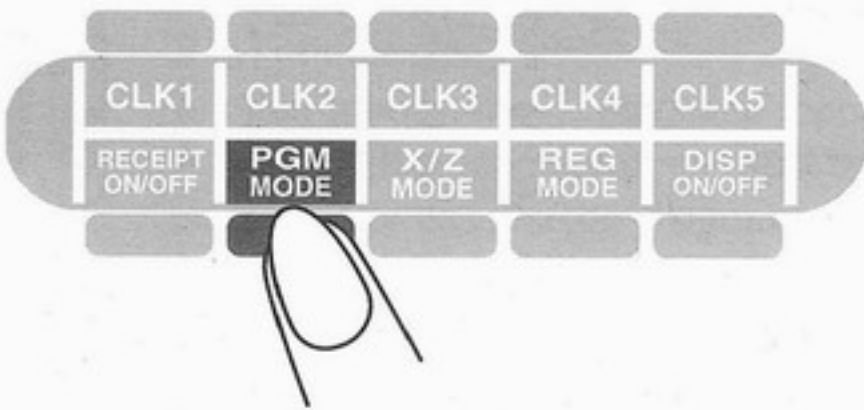

4. Enter the current time in four digits (hour, minute order) and press the key.

